BRASS TRIM KIT

Includes Hardware Kit 102865-03

GA6093
For Use Only with Vent-Free
See-Thru Fireplace Models
FBST, UVC-ST, and UV-ST Series

Installation Instructions

Note: This kit is for one side of firebox only.

1. Remove packaging from three pieces of brass trim.
2. Locate the two adjusting plates with set screws and two shims in the hardware packet.

   If any of these pieces are missing or damaged, contact the dealer where you purchased this kit or DESA International at 1-800-972-7879 for referral information.
3. Align shim under adjusting plate as shown in Figure 1.
4. Slide one end of adjusting plate/shim in slot on mitered edge of top brass trim (see Figure 1).
5. Slide other end of adjusting plate/shim in slot on mitered edge of side brass trim (see Figure 1).
6. While firmly holding edges of brass trim together, tighten both screws on the adjusting plate using a slotted screwdriver.
7. Repeat steps 1 through 6 for other side.
8. Place the assembled trim onto firebox cabinet. Align hanging notches on trim with trim hanging shoulder screws (see Figure 2). Tap trim firmly into place with palm of hand or rubber mallet by engaging hanging notches around shoulder screws. Start at one end of the trim and work around firebox until all notches are fully engaged.

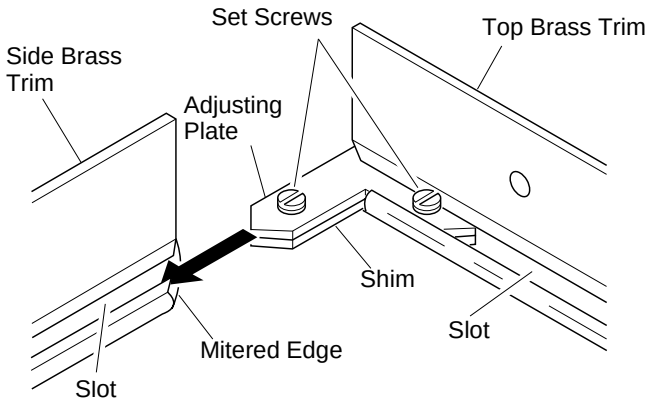

Figure 1 - Assembling Brass Trim

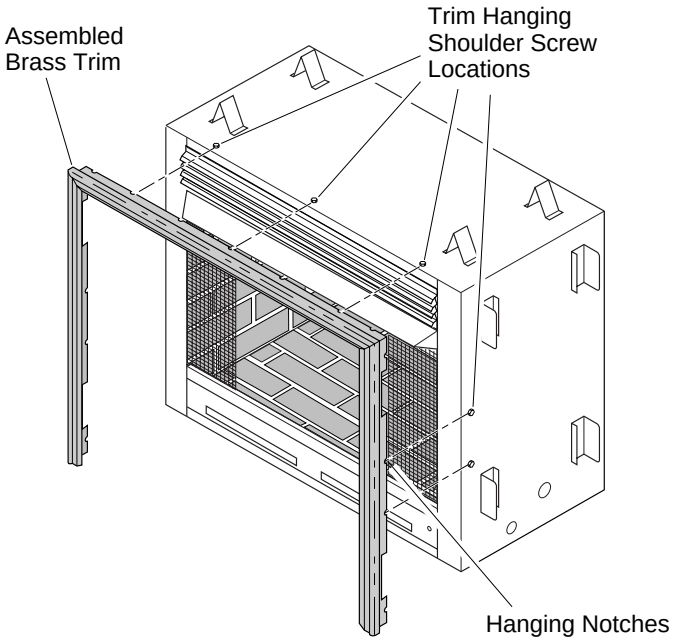

Figure 2 - Assembling Brass Trim

DESA
INTERNATIONAL
2701 Industrial Drive
P.O. Box 90004
Bowling Green, KY 42102-9004
www.desatech.com

107229 01

NOT A UPC

107229-01
REV. A
02/00